

48V Rack Mounted Li-ion Battery TEST REPORT

Work with Victron Inverter



Version: 1.0
Date:2020-09-25

DOCUMENT NOTICE: The test report is prepared by the Li-ion battery R&D department of Hengyang Rich power Co., Ltd. ("RITAR") and will be subject to change without prior notification. RITAR reserves the right to make changes in the design of its products or components as progress in engineering and manufacturing may warrant. It is the customer's responsibility to satisfy itself as to whether the information contained herein is adequate and sufficient for a user's particular use. It is the further responsibility of each user to ensure that all applications of RITAR's products are appropriate and safe based on conditions anticipated or encountered during use.

This document does not create any additional obligation for RITAR and does not constitute additional warranties and representations.

This document mainly introduces the matching test between Ritar rack-mounted lithium battery 48V series and Victron Quattro + Color Control GX(CCGX).

1. Test Introduction

1.1 Hardware preparation



Ritar Rack mounted
Li-ion battery



Victron Quattro Charger/inverter
and Color Control GX



PC with windows operating
system



Communication cable 1
Quattro inverter to CCGX
(Provided By Victron)



Communication cable 2
Battery to CCGX
(Provided By Ritar or refer to
Annex 1)




Communication cable 3
Battery to battery
(Provided By Ritar or refer to
Annex 2)



RS232 to USB -
Battery to PC
RJ11 to USB

1.2 Software preparation

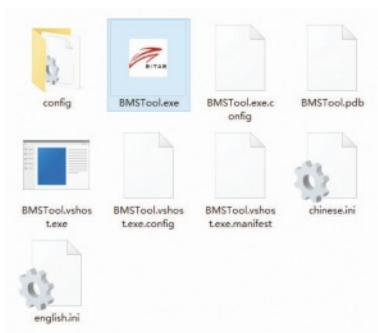


BMS PC monitor software
Download:

<https://github.com/Ritar-Wei/Ritar-BMS-software-48V/archive/master.zip>


or

http://120.27.63.138:8181/docs/rack_48v/software


1.2. Test wiring topology-Single battery

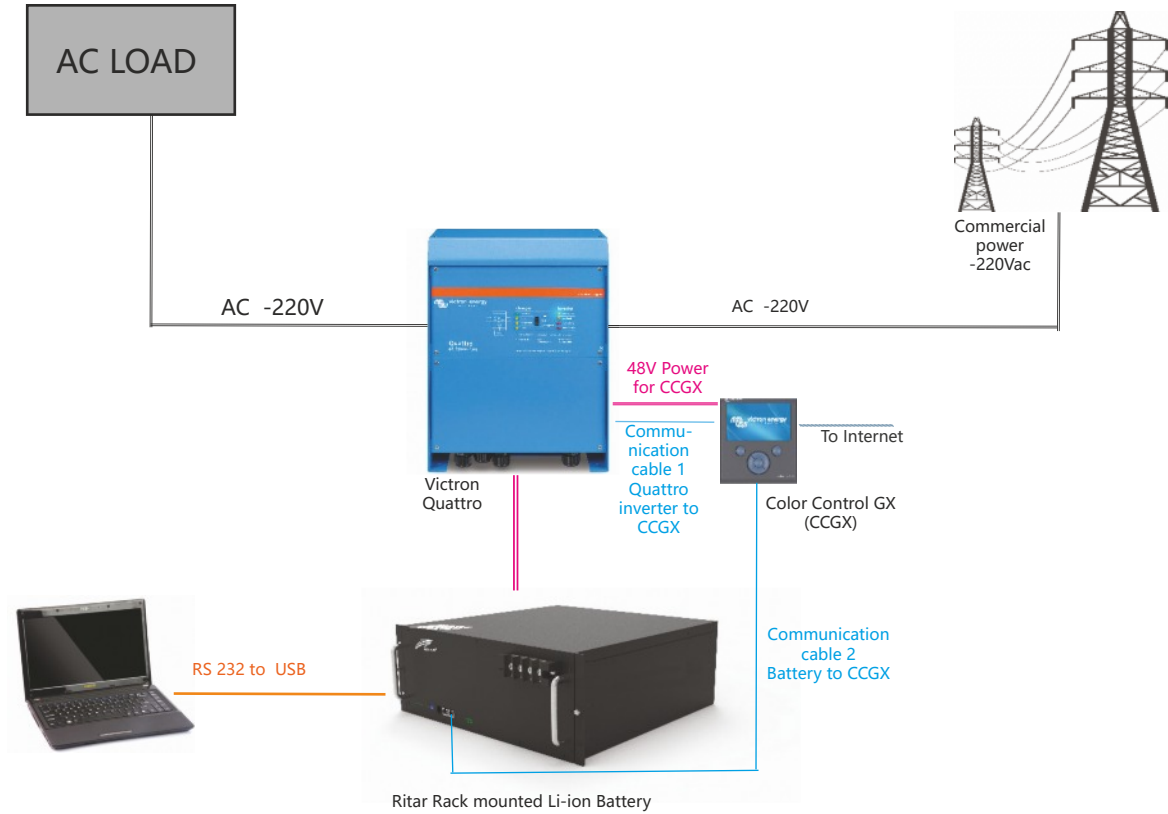

Communication Cable connection

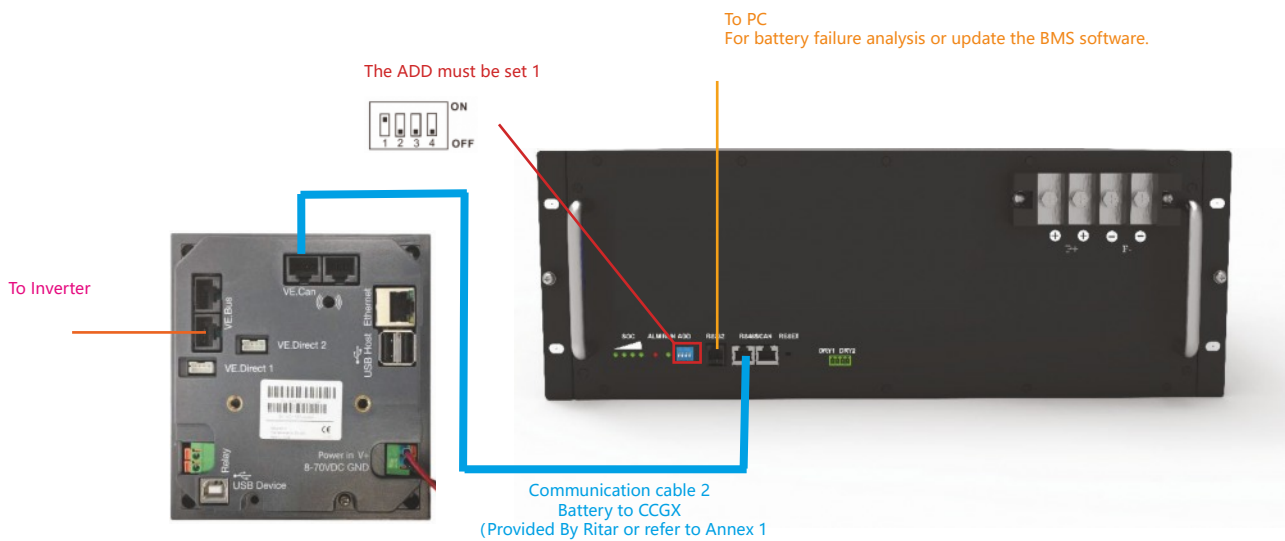

1.3. Test wiring topology-Multi battery

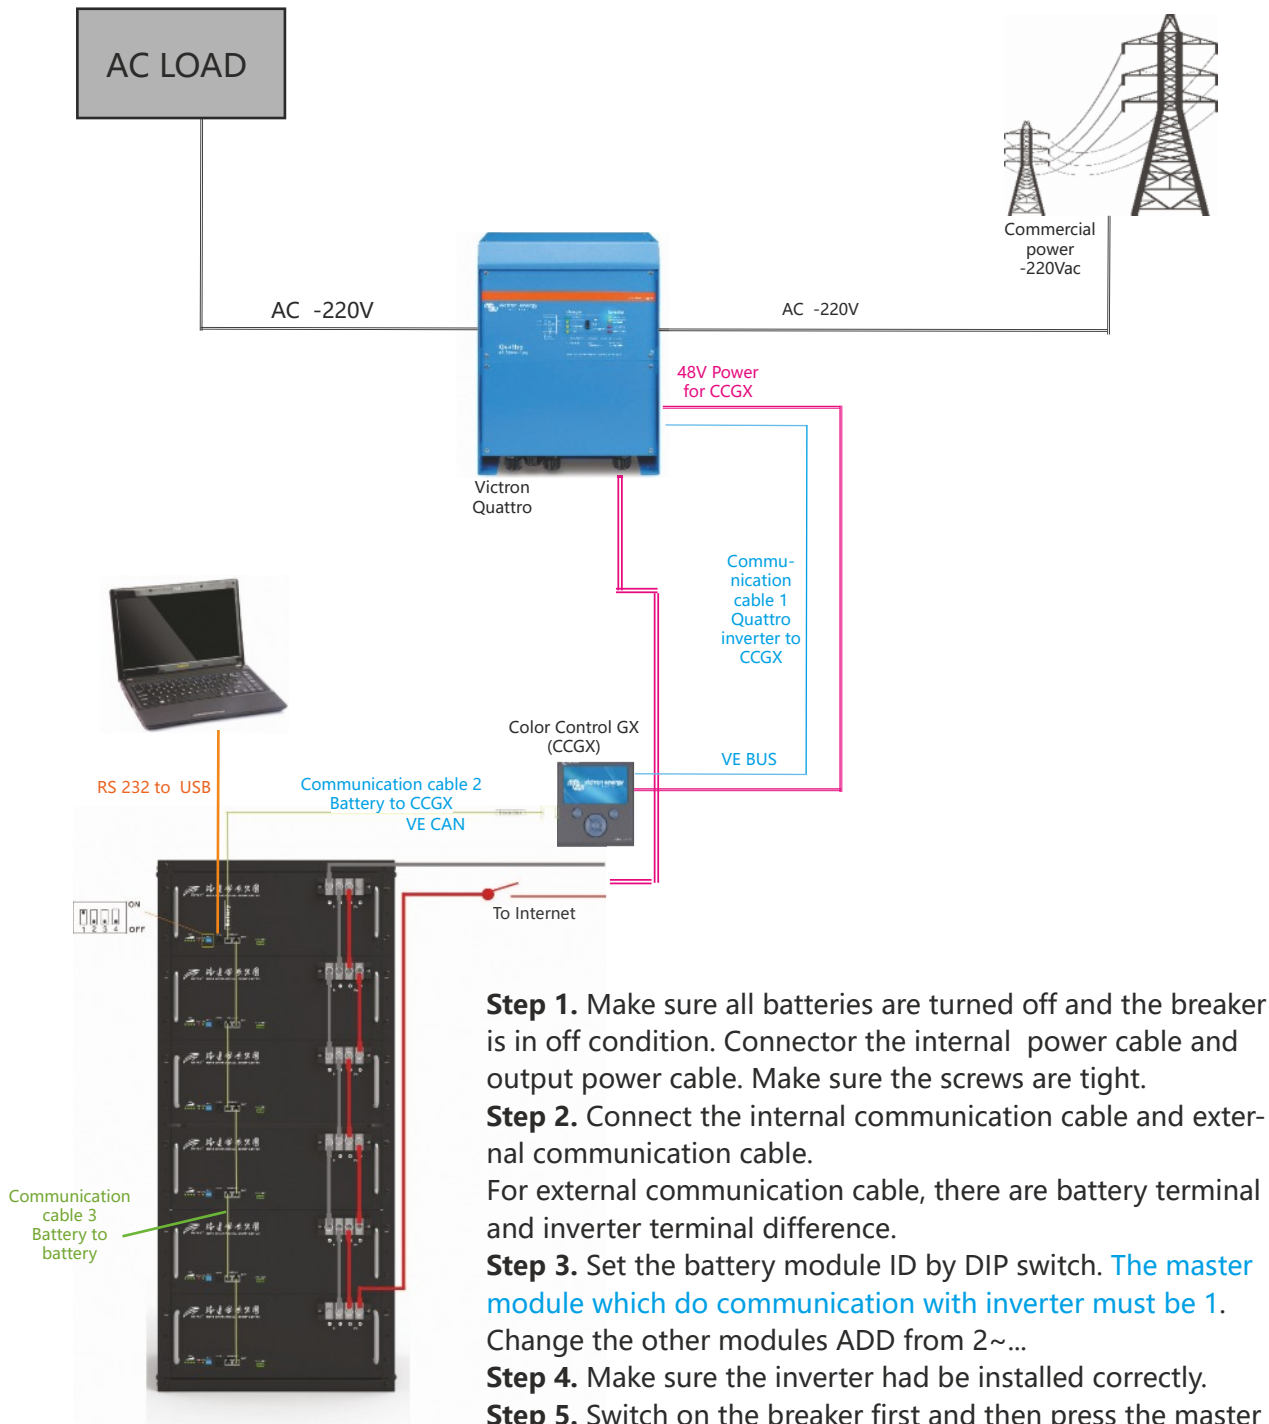

- Step 1.** Make sure all batteries are turned off and the breaker is in off condition. Connector the internal power cable and output power cable. Make sure the screws are tight.
- Step 2.** Connect the internal communication cable and external communication cable. For external communication cable, there are battery terminal and inverter terminal difference.
- Step 3.** Set the battery module ID by DIP switch. **The master module which do communication with inverter must be 1.** Change the other modules ADD from 2~...
- Step 4.** Make sure the inverter had be installed correctly.
- Step 5.** Switch on the breaker first and then press the master module' s RESET button 1~6s to activate the battery. the slave modules will be activated automatic.
- Step 6.** Charge the batteries fully in first use.