



Streamline Mounts Installation Guide

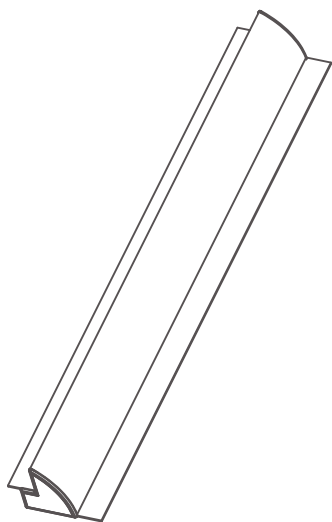


Streamline Mounts x 2

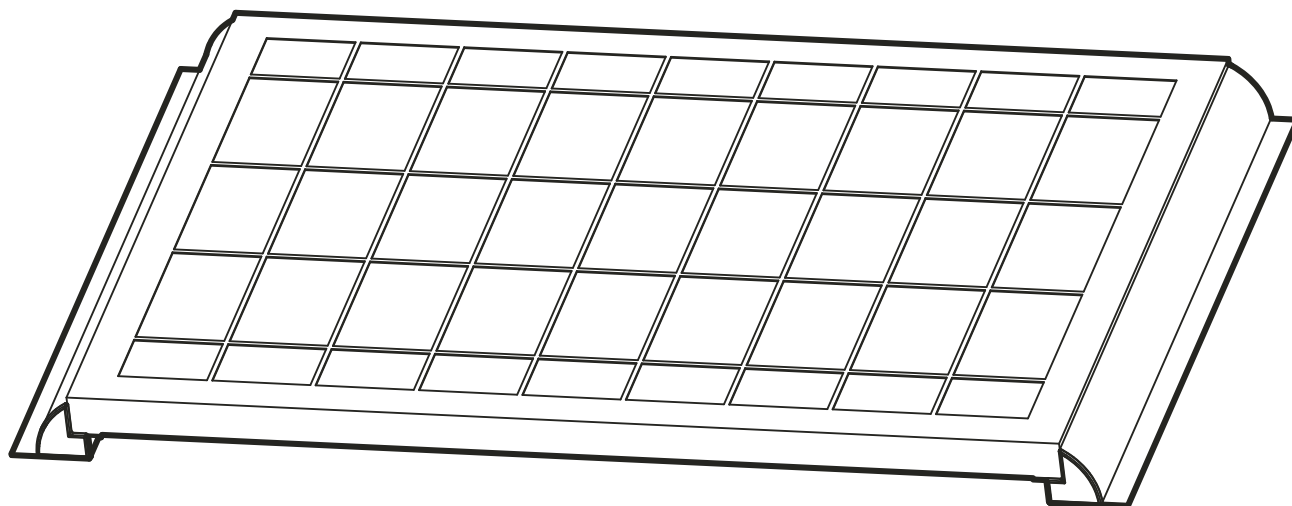


Bostik-360 industrial Adhesive

Installation Steps:



1. Apply industrial adhesive to the inside of Streamline Mounts

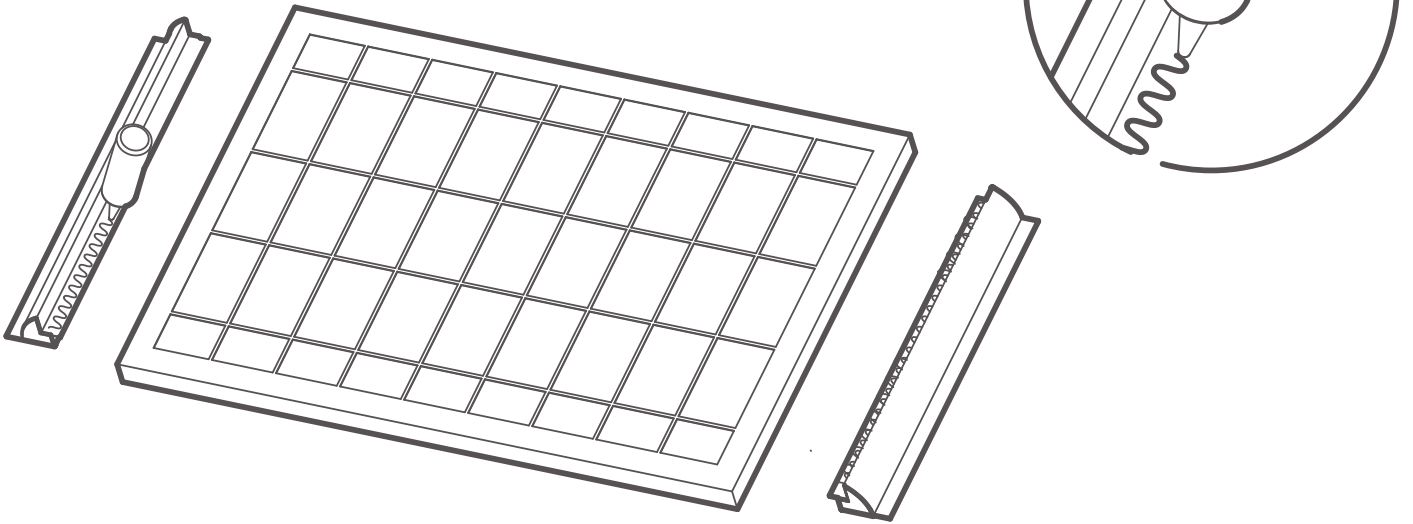

2. Apply industrial adhesive to the bottom of Streamline Mounts

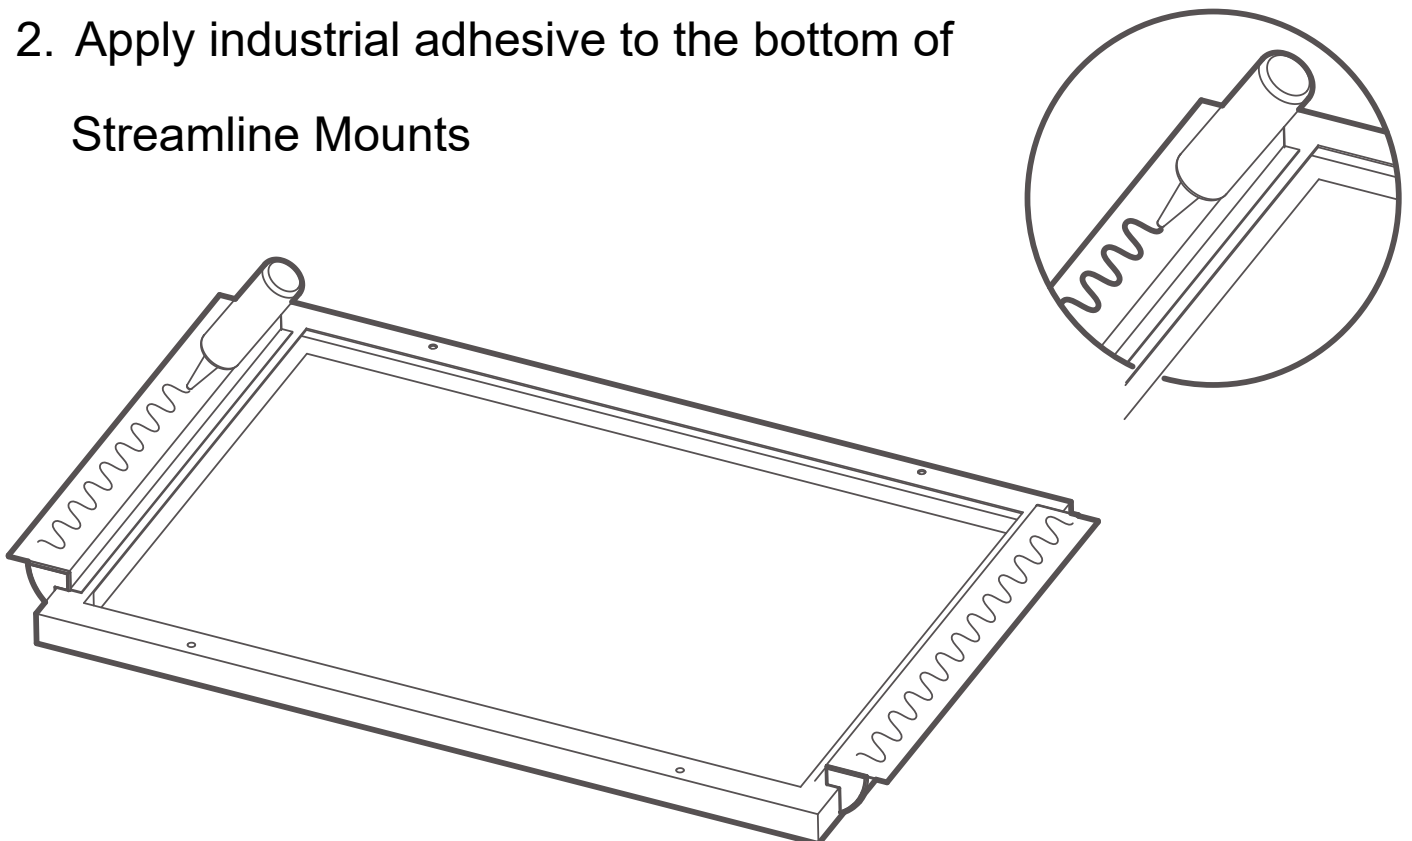

Finished

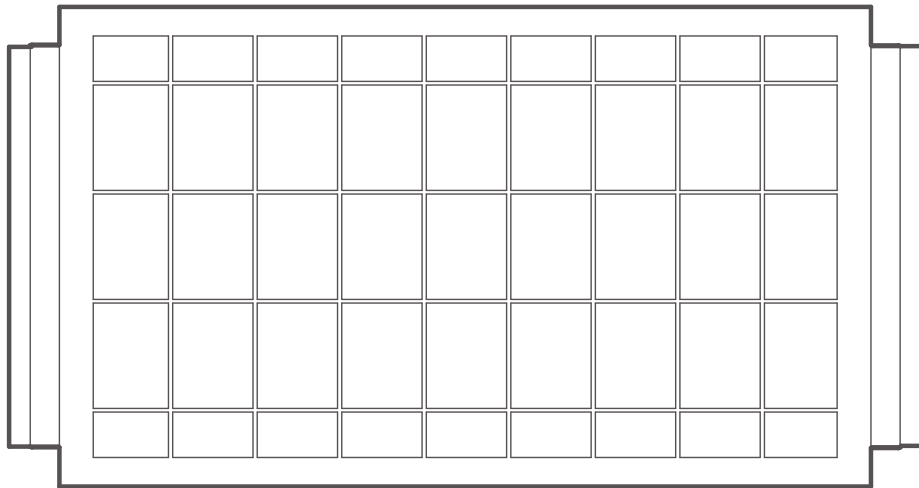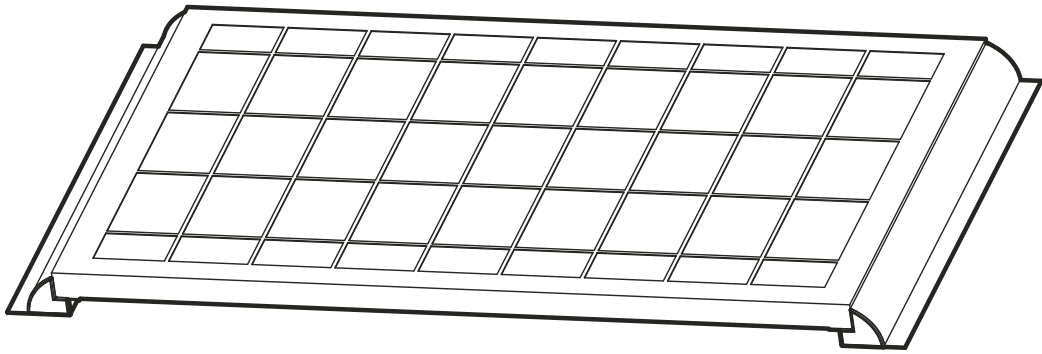

Registered office:

Sunshine Solar Limited

Unit 30, Ashwellthorpe Industrial Estate

Ashwellthorpe

Norwich

Norfolk

NR16 1ER

tel. +44 (0)1508 488188

email. support@sunshinesolar.co.uk

web. www.sunshinesolar.co.uk

